

PRODUCT

Fluorescent Heel Grounder

TECHNICAL DATASHEET



DESCRIPTION

Designed to be easily visible, these fluorescent heel grounders are especially useful in helping supervisors to see that they are being worn, even at a distance. Hard wearing, designed for long term use, these heel grounders can be washed by hand with a mild detergent. Recommended to be worn on both feet.

The heel grounder should be tested regularly using the footwear test station, product code 093-0037.

FEATURES

- Clip fastening with snap release
- Double layered conductive cup (0.14" x 9.06")
- Each heel grounder incorporates a 1Meg safety resistor
- Designed for use with ESD flooring
- Reusable
- Conforms to ANSI/ESD S20.20, EIA 625

DETAILS	NOTES
Outer Conductive Surface (Black)	10 ³ - 10 ⁵ Ohms
Inner Anti-Static Surface (Grey)	10 ⁷ - 10 ⁸ Ohms
Conductive Tab (Yellow)	10 ³ - 10 ⁴ Ohms
Overall Resistivity	10 ⁶ Ohms
Resistance	1Meg Resistor built in

PRODUCT CODE	DESCRIPTION	SIZE	NOTES
068-0002	Fluorescent Heel Grounder with Clip	One size	Each

To request a quotation or for more information, please call **+44 (0)1473 836200**
email info@antistat.co.uk or visit www.antistat.co.uk

IMPORTANT: This data sheet and its contents (the "Information") belong to Antistat or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but Antistat assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where Antistat was aware of the possibility of such loss or damage arising) is excluded. © 2025 Antistat.

INSTRUCTIONS FOR USE



1 Remove Heel Grounder from its packaging and place the Black Conductive Rubber Strip on the heel grip of the shoe.



2 Place the Neon Elastic Strip at the back of the shoe.



3 Push the Clip Fastener together to lock in place and pull the tail of the Neon Elastic Strap to tighten.



4 Feed the Grey Conductive Ribbon into the sock or shoe to complete the grounding path.



5 Inspect the Heel gripper for a secure and comfortable fit by gently tugging on the straps.




6 The footwear is now ready to be tested before entering a static sensitive area. Repeat with other shoe.

To request a quotation or for more information, please call **+44 (0)1473 836200**
email info@antistat.co.uk or visit www.antistat.co.uk

IMPORTANT: This data sheet and its contents (the "Information") belong to Antistat or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but Antistat assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where Antistat was aware of the possibility of such loss or damage arising) is excluded. © 2025 Antistat.

DETAIL

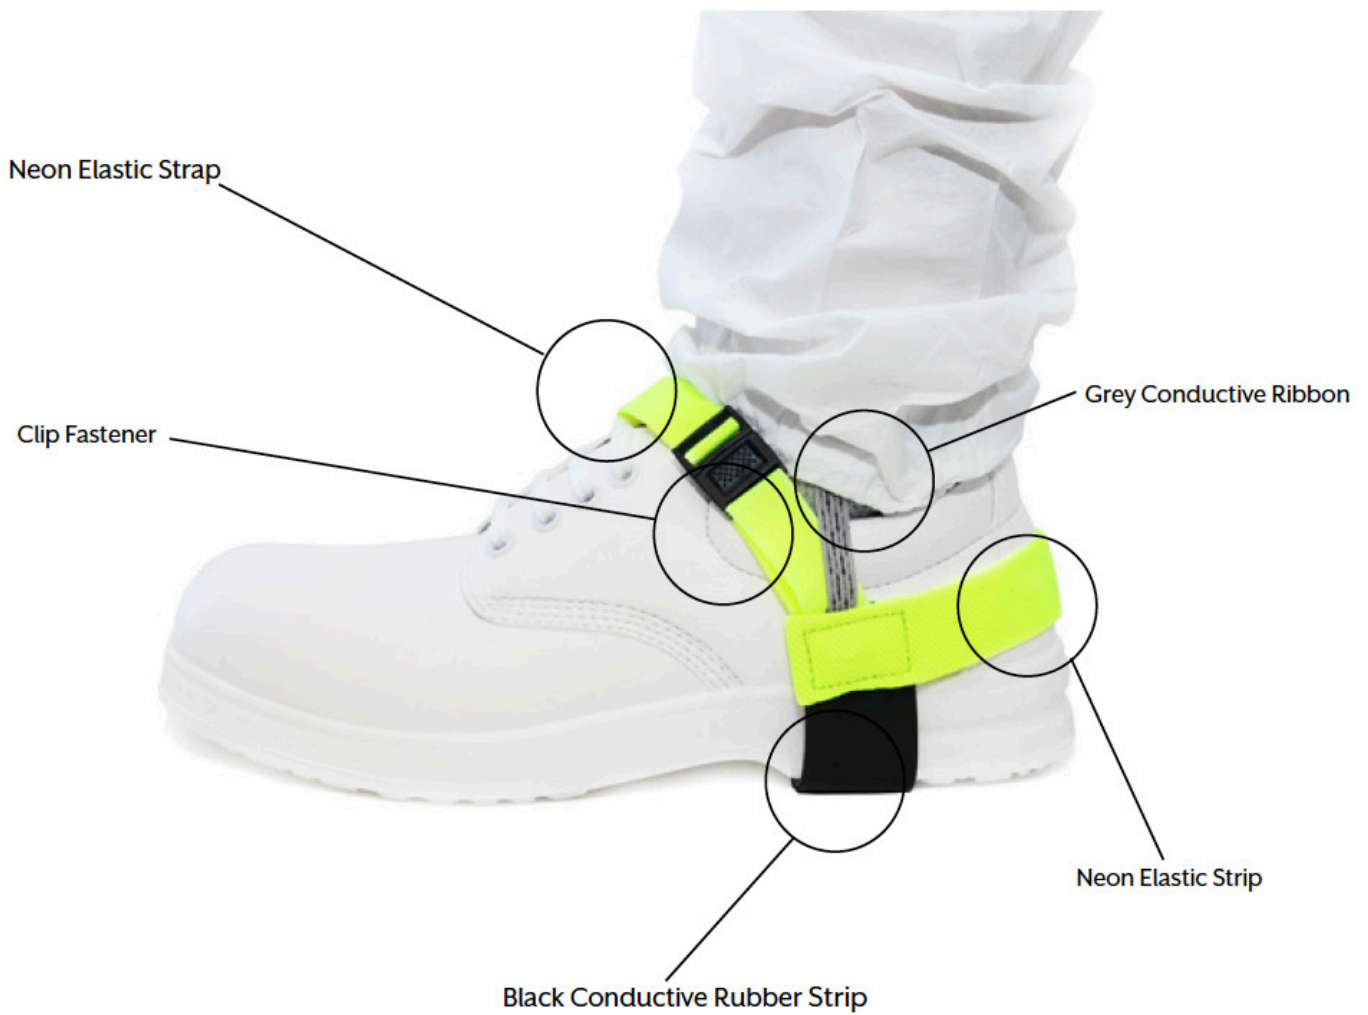

To request a quotation or for more information, please call **+44 (0)1473 836200**
email info@antistat.co.uk or visit www.antistat.co.uk

IMPORTANT: This data sheet and its contents (the "Information") belong to Antistat or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but Antistat assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where Antistat was aware of the possibility of such loss or damage arising) is excluded. © 2025 Antistat.